POW301 取扱説明書
(POW301 User's Manual)

CONTEC

このたびはPOW301をご購入頂きましてありがとうございます。
POW301はFA-PAC(PC)シリーズ交換用電源です。以下の事項を参考にご使用ください。

POW301 is a power supply for FA-PAC(PC) series exchange.
Please use it referring to the following matter.

(1) 商品構成 (This Product Includes)

- 電源 (Power Supply) …… 1
- 取扱説明書 (User's Manual) … 1

(2) 交換手順 (Exchange Process)

1) まず、電源コードをシャーシから外します。そして上面カバーを留めているネジを外し、カバーを開けます。

First remove the power cord from the chassis. And remove the screws that hold in place the cover. Then open the cover.

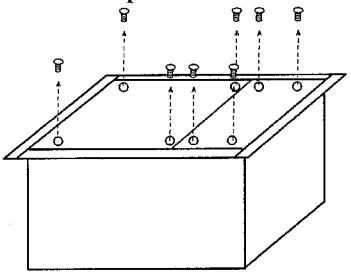

2) バックプレーン、FDD、HDDの電源供給ケーブル、電源スイッチの接続端子をそれぞれ取り外します。

Remove the power connectors from HDD, FDD and backplane respectively. Finary, remove the connection terminals from the power switch.

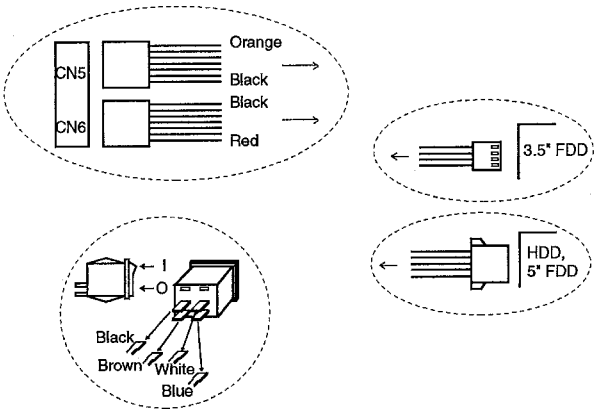

3) 電源ユニットを留めている、背面4箇所のネジを外し、電源ユニットを取り外します。

Remove four screws that hold in place of the power unit from the rear panel. Then take the used power unit out.

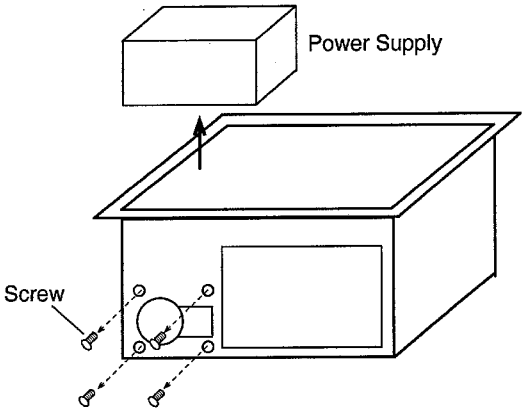

4) 新しい電源ユニットを背面4箇所でネジ留めして実装してください。

Replace this new power unit into the chassis. Fix the unit to the rear panel with four screws. Tighten the screws so that the unit is held in place.

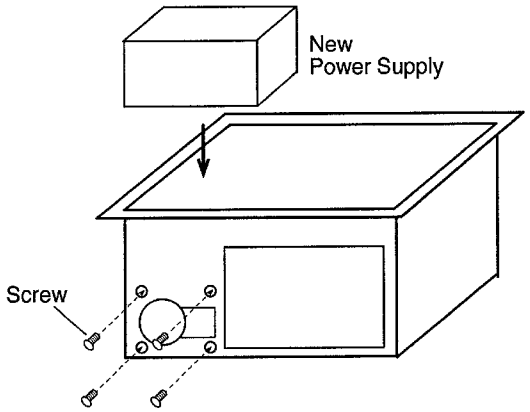

5) バックプレーン、FDD、HDDの電源供給ケーブル、電源スイッチの接続端子をそれぞれ接続します。

Connecte the terminals the power switch based on the following diagram. Connecte the connectors to HDD, FDD and backplane based on the following diagrams respectively.

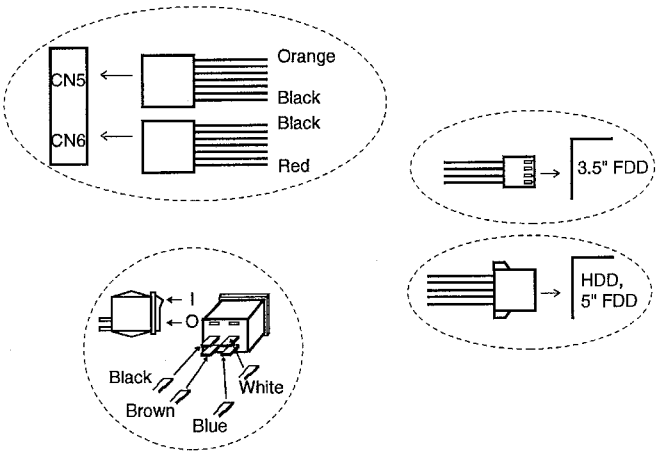

6) 取り外すときと逆の手順で、カバーを元通りネジ留めします。そして電源コードを接続します。

Put the chassis cover on and fix it with screws. Tighen the screws so that the cover is held in place. Connecte the power cord.